

Stem

Information about installation, maintenance and warranty

- A** Check the stem after receiving for irregularities (paint- or thread damage).
- B** Keep your bill in case of complaints and warranty claims.
- C** Don't assemble the stem screws with more than 29 Nm.
- D** Follow up the steps for assembling a stem: Look for a same distance between the stem and the stem-plate. Install the screws as far you get by hand. Fix the screws alternating and crosswise with a tool (29 Nm).
- E** The stem has to fit completely on the fork shaft.



UNI-VICTOR INTERNATIONAL CORP

No. 50, Lane 462, Guang Shing Road, Taiping, Taichung County, Taiwan, R.O.C. 411
Tel: 886-4-2271-4297 | Fax: 886-4-2271-4298 | E-Mail: info@affix.com.tw